



FIND NO.	QTY.	PART NUMBER	PART DESCRIPTION
1	1	135831-000	PUMP HANDLE 把手
2	1	132358-000	BOLT INSERT MOLDED 0488 上槌插件
3	1	133108-000	WASHER-BOLT 0488 上槌介子
4	1	136063-000	HAMMER SPRING 撞槌?簧
5	1	135724-000	HAMMER-0488 撞槌
6	1	133109-000	VALVE STEM-0488 活?
7	1	132352-000	VALVE RETAINER-0488 活?固定器
8	1	134668-000	O-RING VALVE RETAINER-0488 密封圈
9	1	136037-000	VALVE SEAL -PC 0488 密封活?
10	1	137051-000	SPRING VALVE 1420 ?簧
11	1	135723-000	VALVE BODY -1009 ?身
12	2	133294-000	O-RING PUNCTURE PIN 密封圈
13	2	134513-000	RETAINER PUNCTURE PIN IPC 孔?固定器
14	2	130709-000	FACE SEAL - 0488 密封圈
15	2	130279-002	CO2 CYLINDER 12 GRAMS 12克气瓶
16	1	134927-000	PIERCING SCREW 后盖螺?
17	1	137055-000	SPRING-SEAR 1420 撞槌??簧
18	1	132354-000	PIN - SEAR 撞槌??
19	1	132357-000	SEAR - 0488 撞槌?
20	1	137577-000	TRIGGER - SPRING 1400 扳扣?簧
21	1	133405-000	TRIGGER - 0488 扳扣
22	1	135830-000	HOUSING LEFT 左?克身
23	2	135766-000	BALL STOP 球珠盖
24	1	135814-000	SAFETY - 1170 安全制
25	1	135827-000	LID - HOPPER 入料槽盖
26	1	135828-000	HOPPER 50CT 入料槽
27	1	135829-000	HOUSING RIGHT 右?克身
28	7	131427-000	HI-LOW SCREW M3.5-M3
29	1	130291-000	SENSOR TAG 防盗??