


2111 S. 8th, Rogers, Ar 72758 U.S.A. (501) 636-1200 Fax (501)636-0573 http://www.BrassEagle.com



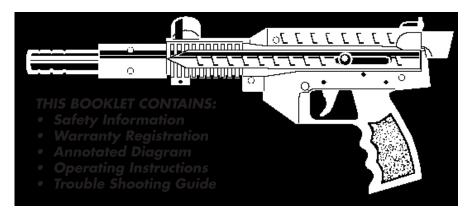

MODEL 1410 OWNER'S MANUAL .68 CALIBER CO₂ POWERED SEMIAUTOMATIC PAINTBALL GUN

NOT INTENDED FOR SALE TO PERSONS UNDER AGE 18

WARNING: THIS IS NOT A TOY. MISUSE / CARELESS USE MAY CAUSE SERIOUS INJURY OR DEATH. NEVER SHOOT AT ANYONE WITHOUT PROPER PROTECTIVE EQUIPMENT FOR EYES, EARS, THROAT AND HEAD, WHICH MUST BE WORN AT ALL TIMES. EYE PROTECTION MUST BE DESIGNED SPECIFICALLY FOR PAINTBALL USE. MUST BE 18 YEARS OR OLDER TO PURCHASE, OPERATE OR HANDLE. READ OPERATION MANUAL BEFORE USING.



BRASS EAGLE®
P.O. BOX 220
ROGERS, ARKANSAS 72757-0220, U.S.A.

MADE IN U.S.A.

PART NO. 137709-000

WARNING: NEVER SHOOT AT ANYONE WITHOUT PROPER PROTECTIVE EQUIPMENT FOR EYES, EARS, THROAT AND HEAD, WHICH MUST BE WORN AT ALL TIMES. EYE PROTECTION MUST BE DESIGNED SPECIFICALLY FOR PAINTBALL USE. FAILURE TO FOLLOW THESE SAFETY PRECAUTIONS MAY RESULT IN BODILY INJURY INCLUDING BLINDNESS AND DEAFNESS.

This safety alert symbol indicates important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

Welcome to the Brass Eagle team and thank you for purchasing this high quality Brass Eagle paintball gun.

We at Brass Eagle stand committed to providing you with the best product and service available. Your Stingray II is designed and manufactured to provide ease of maintenance with trouble free performance. We ask that you read this manual to obtain the maximum enjoyment of your purchase.

Should you need assistance in any way, contact us and we will do everything in our power to help you.

TROUBLE SHOOTING GUIDE			
PROBLEM	CAUSE	CURE	
Gas Leaks from Bottle Connection	Damaged Bottle O'ring	Replace O'ring	
Gas Leaks from Inside Barrel	Damaged Valve Seal	Replace Valve Seal	
Gun Fails to Discharge	Gun Wasn't Cocked	Cock Gun Before Firing	
	Lack of Gas Pressure	Refill Bottle or Change CO ₂ cylinder	
	Gas Source Not Fully Engaged	Screw Gas Source into Constant Air Adapter.	
Gun Fails to Recock	Damaged Hammer O'ring	Replace Hammer O'ring	
	Lack of Gas Pressure	Refill Bottle or Change CO ₂ cylinder	
Bolt Sticks	Shell Fragment Stuck Between Bolt and Receiver	Remove Bolt, Clean, and Lubricate	
Broken Paintballs	Excessive Paint Buildup in barrel Defective Paintballs	Squeegee Paint out of Barrel Replace paintballs	


2 11

INTERNAL SUB-ASSEMBLY REMOVAL CONTINUED

- **Step 3.** Remove cocking handle by turning counter-clockwise. Fig. 3.
- Step 4. Push out two push pins located in front of and behind the trigger area and one push pin located behind the feed port area.
- **Step 5.** Remove lower receiver (containing trigger). Fig. 4.
- **Step 6.** You can now remove internal sub -assembly from rear of gun. Fig 5.
- Step 7. Remove bolt from bolt guide and clean bolt and other internals which may have dirt or paint residue on them.

REASSEMBLY

Follow above steps in reverse order. Lubricate bolt and hammer with a light grade oil prior to reinstalling.

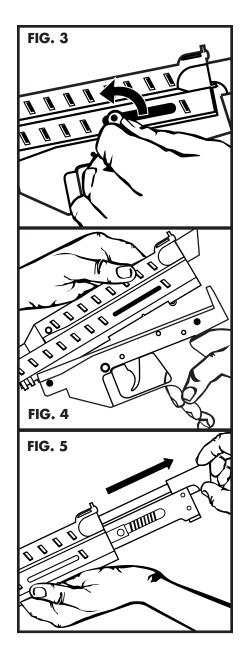





MODEL 1410 OWNER'S MANUAL .68 CALIBER CO₂ POWERED SEMIAUTOMATIC PAINTBALL GUN

TABLE OF CONTENTS

TOPIC	PAGE
Rules of Safe Gun handling	4
Warranty Information	5
Annotated Diagram of Gun	6-7
Operating Instructions	8-9
Field Strip Instructions	9-10
Trouble Shooting Guide	11

Λ

RULES OF SAFE GUN HANDLING

- 1. Treat every gun as if it were loaded.
- 2. Never point the gun at anything you don't wish to shoot.
- 3. Keep the gun on safe until ready to shoot.
- 4. Keep the barrel plug in the gun's muzzle when not shooting. (barrel plug sold as an accessory)
- 5. Always remove gas source before disassembly.
- 6. Store the gun unloaded and degassed in a locked place.
- 7. Follow warnings listed on gas source for handling and storage.
- 8. Never use ammunition other than .68 caliber paintballs.
- 9. Do not shoot fragile objects such as windows.
- 10. Paintballs may cause staining of some porous surfaces such as brick, stucco and wood.
- 11. Always wear proper eye, face and ear protection designed specifically to stop paintballs.
- 12. Never shoot a person who is not wearing proper protection.
- 13. Always measure velocity before playing paintball.
- 14. Never shoot at velocities in excess of 300 feet per second.

cause subsequent balls to break and will adversely affect the gun's accuracy. RECOMMENDED: Brass Eagle® brand, tournament quality .68 caliber paintballs. Balls should be stored in a cool dry place in sealed plastic bags. Do not subject to freezing, excessive heat, humidity or store in direct sunlight. These conditions may cause ball breakage and/or poor feeding.


- **Step 5.** Make sure everyone within 200 yards is properly protected from paintball impacts.
- **Step 6.** Remove barrel plug and take off safe by pressing safety from right side of gun until red band is showing. (Barrel Plug sold as an accessory)
- Step 7. VERIFY VELOCITY: Verify that the gun's velocity is below 300 feet per second or less if required by playing field. Velocity should be measured with a chronograph prior to playing paintball. Velocity may be adjusted by turning velocity adjustment screw (using a 3/16 allen key). Turning the screw counterclockwise decreases velocity.
- **Step 8. FIRE.** Gun is now ready to fire.

warning: Never shoot at anyone without proper protective equipment for eyes, ears, throat and head, which must be worn at all times. Eye protection must be designed specifically for paintball use. Failure to follow these safety precautions may result in bodily injury including blindness and deafness.

FIELD STRIP GUIDE

INTERNAL SUB-ASSEMBLY REMOVAL

- **Step 1.** Remove gas supply from gun.
- **Step 2.** Make sure bolt is in the forward position (sear is not engaged). Fig. 2

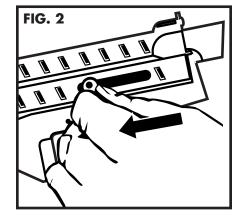

OPERATING INSTRUCTIONS

WARNING: Be sure the gun is always pointed in a safe direction. Read the following operating instructions and WITHOUT LOADING ANY AMMUNITION, proceed several times through the operating steps with your gun (dry fire the gun at a safe target) so that you will be able to operate the Stingray properly and safely.

- **Step 1. Put on 'SAFE'.** Push safety from left to right; no red band showing. Make sure barrel plug is placed securely in muzzle of gun. (Barrel Plug sold as an accessory)
- **Step 2. COCK:** Cock gun by pulling cocking knob fully back until locked in sear position. The Stingray II is a semiautomatic gun, which will re-cock itself after firing when working properly. It is only necessary to cock the gun when installing gas, or for initial shot.
- **Step 3. SCREW IN POWER SOURCE:** Gun can be used with either quick change adapter (12 gram cylinders) or constant air tank. RECOMMENDED: Daisy 12 gram cylinders or Brass Eagle® item #1471 9oz. constant air tank. When using 12 gram cylinders one can expect to get around 18 shots from each cylinder whereas 9 ounce refillable bottles will provide in excess of 400 shots.

WARNING: For quick change adaptor CO₂ use: Use only CO₂ cylinders which are 12 gram type. Any attempt to use other sizes and/or cylinders containing other types of gas could be extremely dangerous. The use of gasses other than CO₂ could result in an explosion or rupture of the gun, causing seroius injury.

CAUTION: CO₂ cylinders or tanks may explode at temperatures above 130°F (54.4°C).

Step 4. LOAD PAINTBALLS:

- 1) Firmly press one inch elbow on feedport.
- 2) Make sure elbow is perpendicular to barrel of gun.
- **3)** Insert hopper into elbow. RECOMMENDED: Brass Eagle® item #1475 200-round hopper with flip top lid.
- **4)** Pour balls into hopper. **NOTE:** Balls are gravity fed from hopper to the gun each time the trigger is pulled. Too rapid a rate of fire, broken balls or too many balls in hopper may

WARRANTY INFORMATION

WARRANTY: LIMITED 90 DAY WARRANTY

For 90 days from date of purchase, Brass Eagle® will repair or replace and return this gun free of charge if defective in material or workmanship. Service is available through Brass Eagle® Paintball Service Centers. Paintball Service Centers may be located by calling Brass Eagle®, 1-501-636-1200 or checking http://www.BrassEagle.com. Guns may also be returned to Brass Eagle for service. Attach your name, address, telephone number, description of problem and proof of purchase (sales receipt) to the gun. Package prepaid. This warranty gives you specific legal rights. You may also have other rights which may vary from state to state.

GUNS OUT OF WARRANTY

Parts can be ordered through Brass Eagle® on order form provided. To order, list part number, quantity and price. Include shipping and handling cost, and tax as required. No parts will be shipped until paid.

For a fee, Brass Eagle® Paintball Service Centers will repair guns which are no longer under warranty. Paintball Service Centers may be located by calling Brass Eagle® 1-501-636-1200 or checking http://www.BrassEagle.com. Guns may also be returned to Brass Eagle® for service. Attach your name, address and brief description of the problem to the gun. Package and send, transportation prepaid, to Brass Eagle®, Service Department. Brass Eagle® will repair the gun or replace it with a reconditioned gun of the same model. A fee will be charged for repairing or replacing your gun. Call 1-501-636-1200 for the amount you need to send.

All guns should be accompanied by check or money order (not cash) in payment of the fee. If payment is not included, you will be invoiced for the fee, plus a handling charge. Upon receipt of payment, the gun will be shipped to you.

FOR UPS DELIVERY: Brass Eagle

Attn: Service Department


2111 South 8th

Rogers, Arkansas 72758

(501) 636-1200

NOTE: The Stingray II paintball gun is controlled by Federal Postal Regulations. You may only send via U.S. Mail an inoperative Stingray II gun to Brass Eagle[®]. The gun will be returned to your attention via UPS. Be certain to include a street address for UPS delivery.

ANNOTATED DIAGRAM: BRASS EAGLE MODEL 1410 STINGRAY II

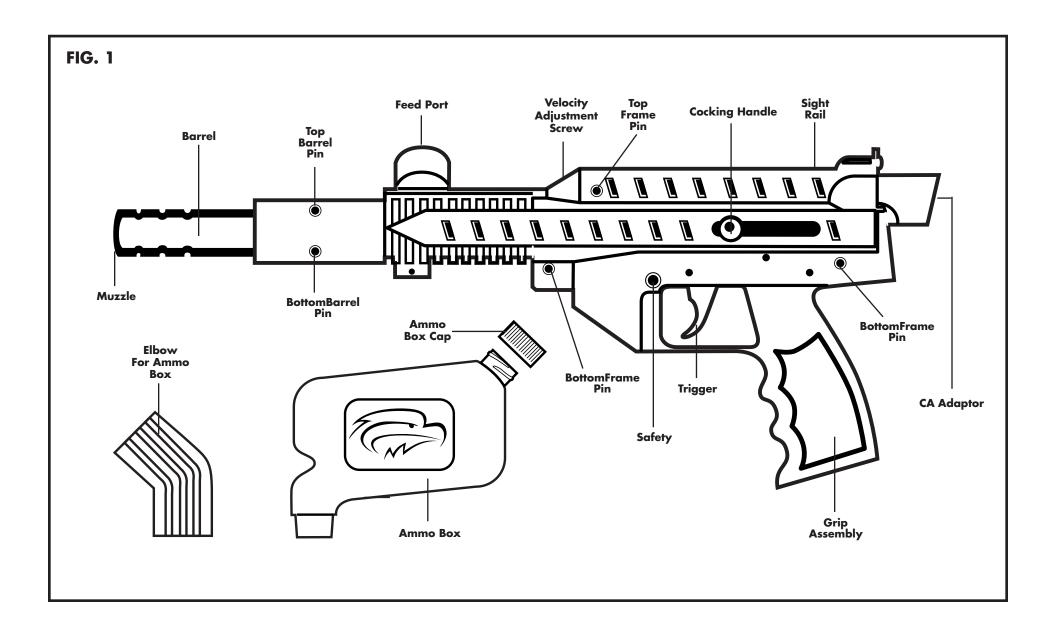

6 7