


Empire® Prophecy™ Loader

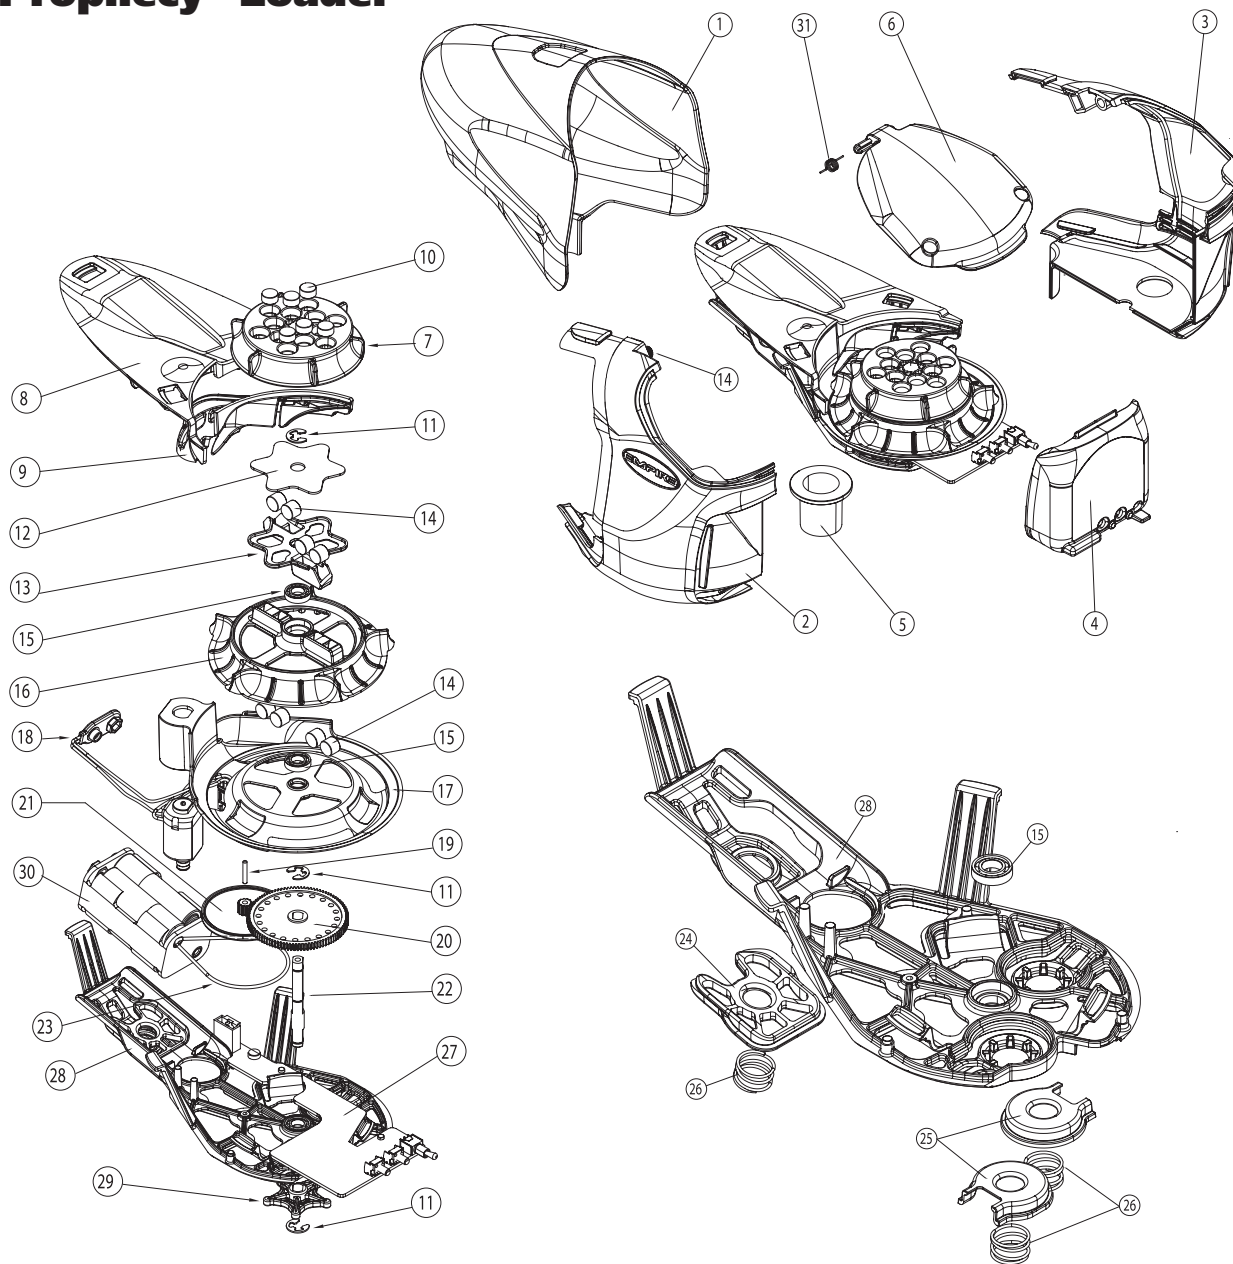

description	item no.	description	item no.	description	item no.
1 Body Front (black)	31000	12 Magnet Plate (6-point)	31010	23 Belt	31017
2 Left Body Side (black)	31001	13 Clutch Plate Housing	31011	24 Spring Lock front	31018
3 Right Body Side (black)	31002	14 Magnet (8mm x 6mm)	38475	25 Spring Lock back	31019
4 Rear Cover	31003	15 Bearing (R188)	38803	26 Lock Spring	31020
5 Neck Insert	31004	16 Drive Carrier	31012	27 Backbone Circuit Board	31021
6 Lid (with magnets)	31005	17 Slide	31013	28 Back Bone	31022
7 Drive Carrier Extension	31006	18 Motor with Harness	31024	29 Rip Drive 2 Wheel	31023
8 Floor	31007	19 Dowel Pin (0.78 Dia x .500)	38828	30 Battery Holder	38746
9 Outlet Cover	31008	20 Sprocket	31014	31 Lid Spring	31025
10 Magnet (8mm x 4mm)	31009	21 Pulley	31015		
11 E-Ring	38823	22 Clutch Shaft	31016		