


PARTS DIAGRAM

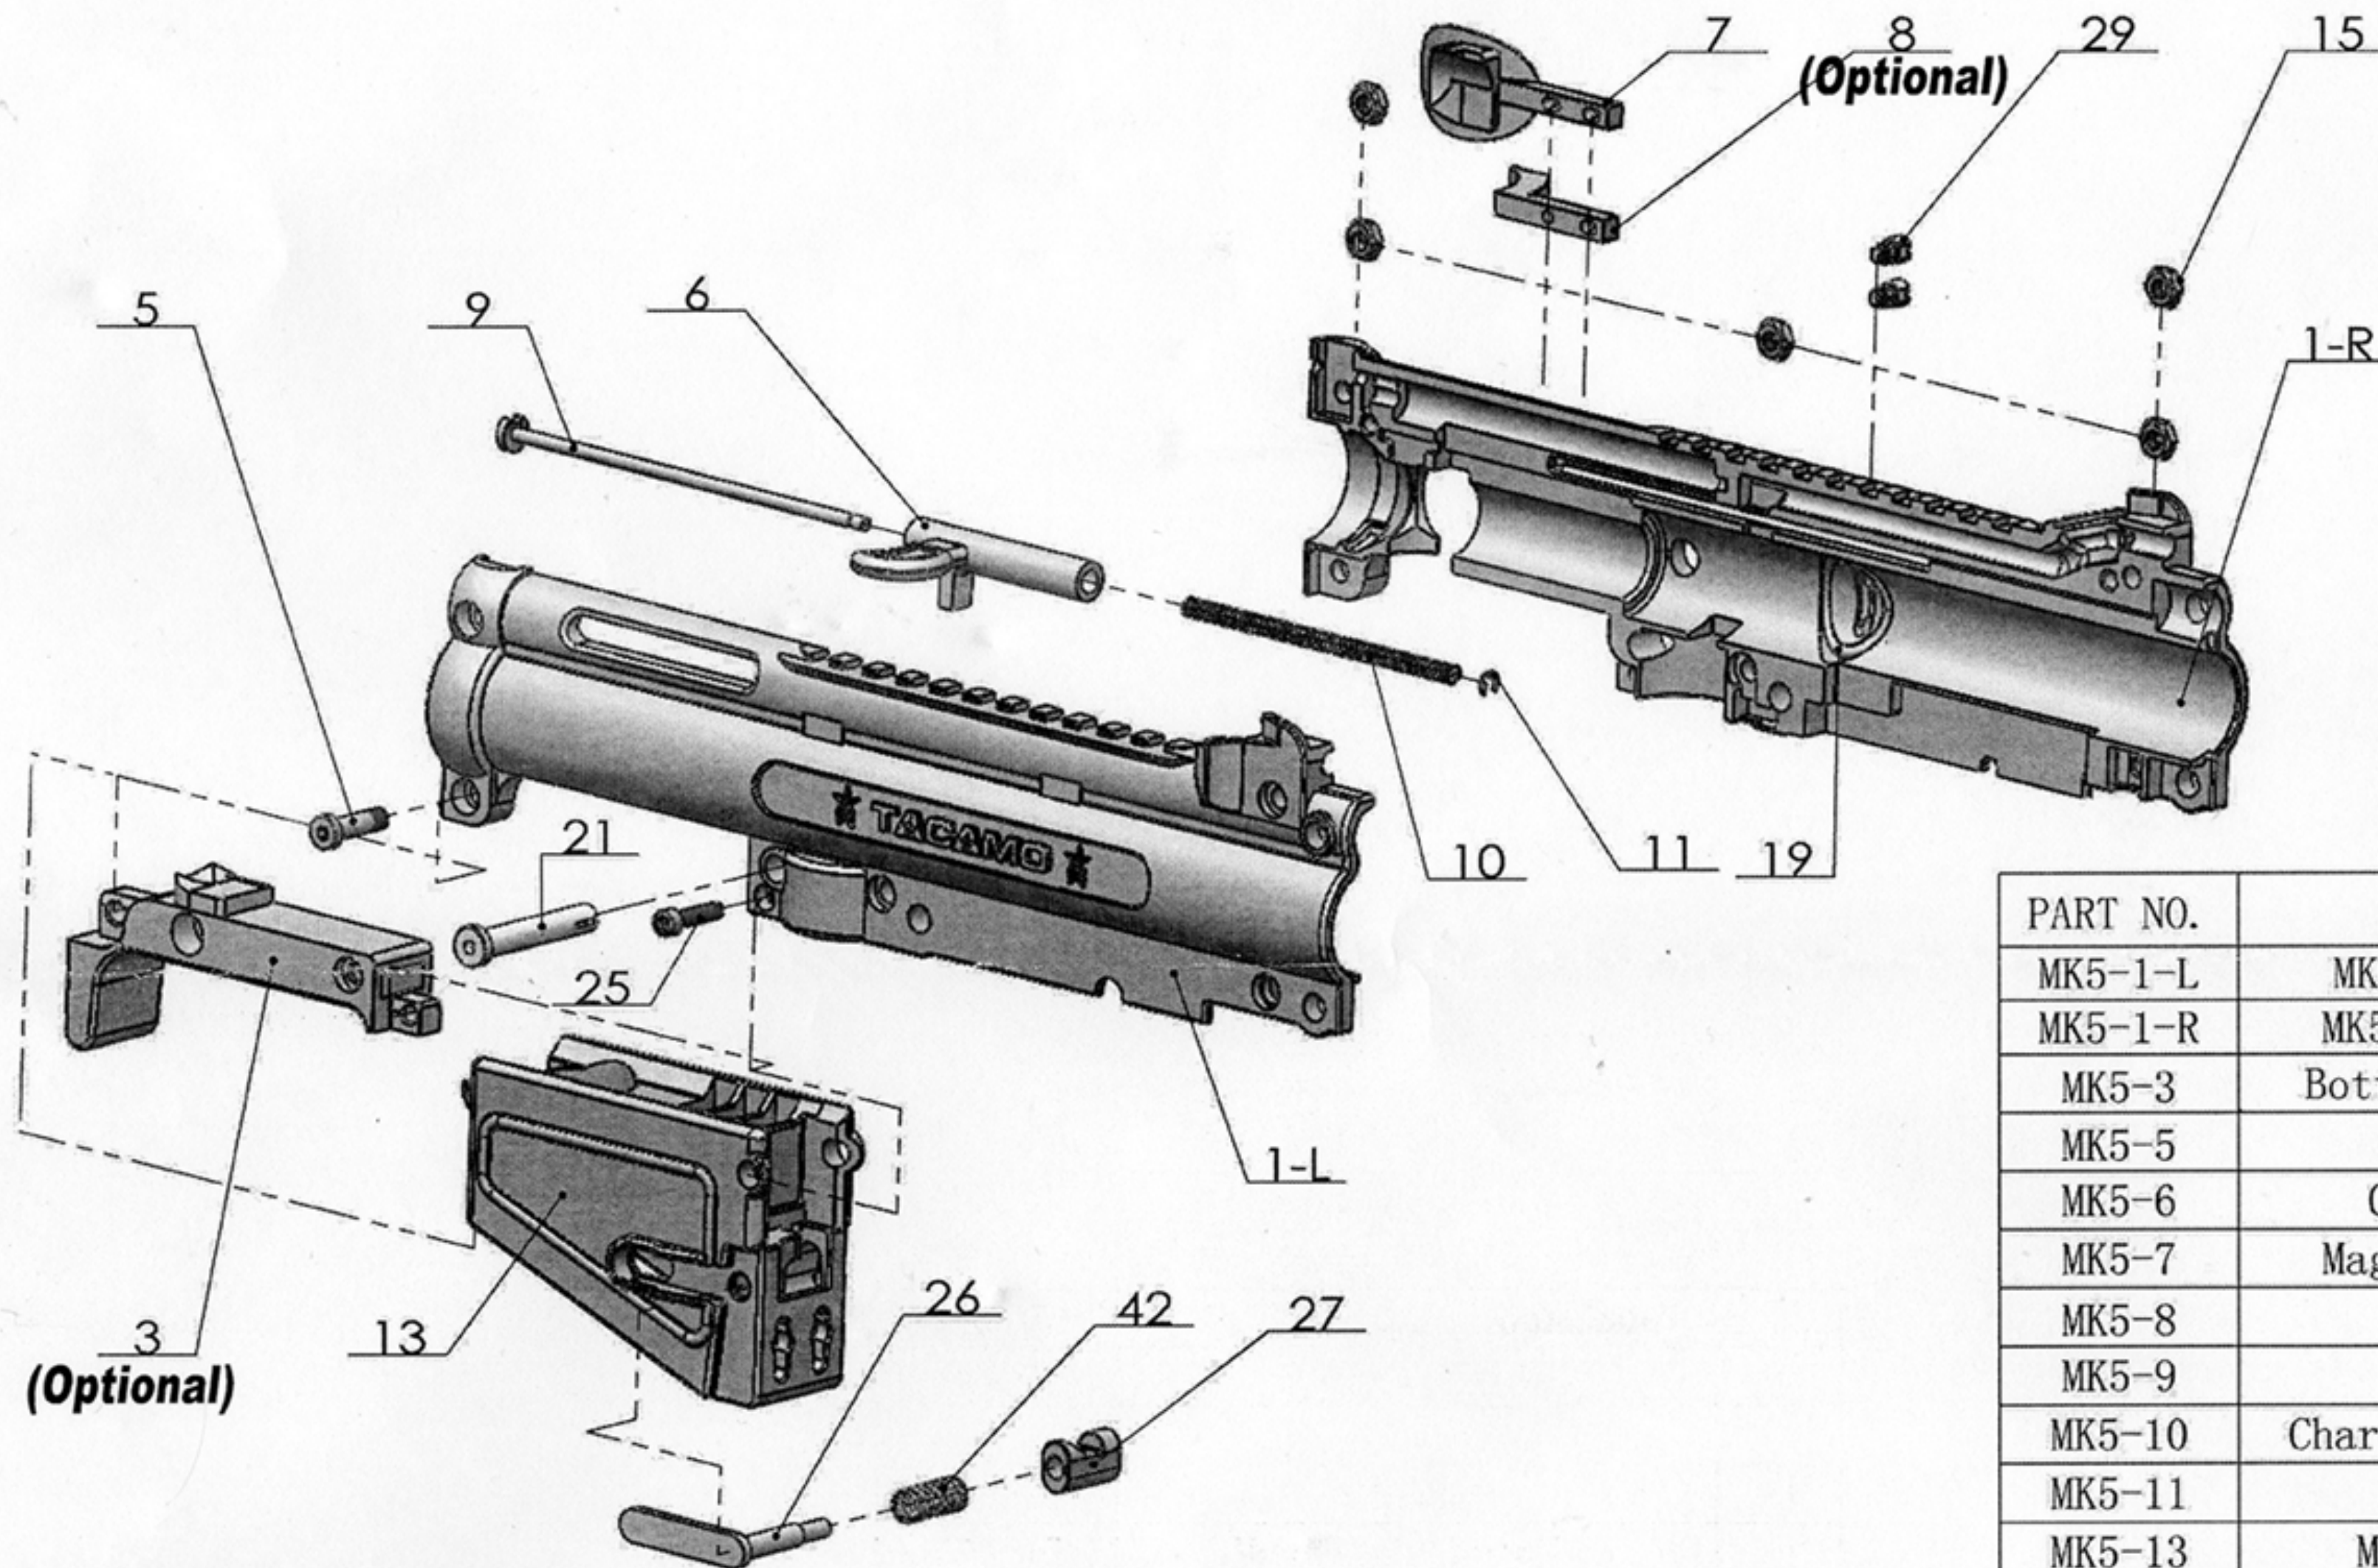

Part List

PART NO.	DESCRIPTION	QTY
MK5-1-L	MK5 Main Body Left	1
MK5-1-R	MK5 Main Body Right	1
MK5-3	Bottom Cover (Optional)	1
MK5-5	Screw-2	1
MK5-6	Charging Handle	1
MK5-7	Magazine Feed Cover	1
MK5-8	Hook (Optional)	1
MK5-9	Spring Guide	1
MK5-10	Charging Handle Spring	1
MK5-11	Ring	1
MK5-13	Magazine Housing	1
MK5-15	Nut	5
MK5-19	O-ring	1
MK5-21	Magazine Housing Pin	1
MK5-25	Screw	1
MK5-26	Magazine Hook	1
MK5-27	Magazine Release	1
MK5-29	Air Plug	2
MK5-42	Magazine spring	1

Installation Information:

1. Verify that all the parts and the designated quantities are supplied in accordance to the part list table
2. Use your manufacture user manual as reference to disassemble and reassemble of the new parts provided
3. Additional installation guide and step by step installation videos are available at tacamopaintball.com/support/